



PILOT PLUMBING CHARTS


Normally Open ENERGIZED = CLOSED
NOT ENERGIZED = OPEN
OVER 80 PSI REQUIRES SPECIAL SOLENOID

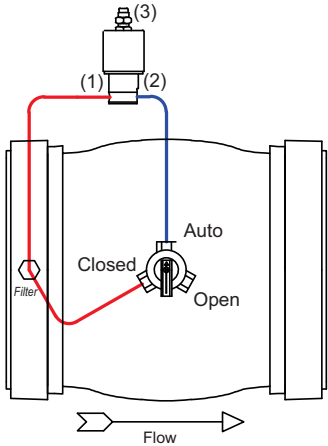


Normally Closed ENERGIZED = OPEN
NOT ENERGIZED = CLOSED

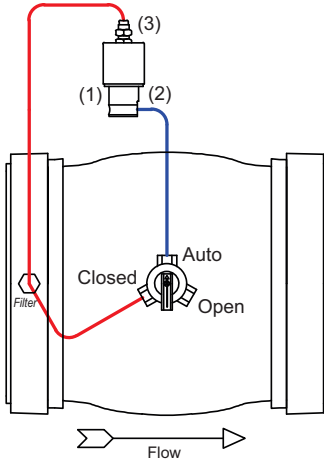


Check Valve ENERGIZED = OPEN
NOT ENERGIZED = CHECK

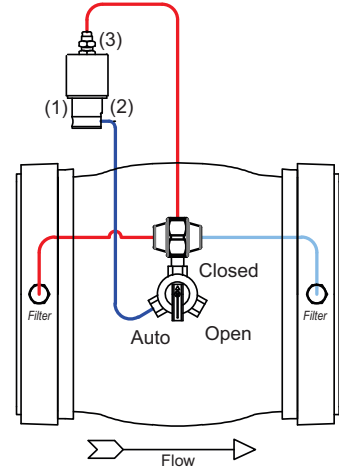


Pressure Reducing & Electric On/Off
6000 Series Pilot and Check Valve

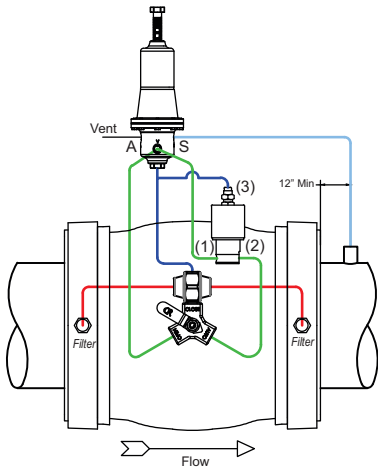

Pressure Sustaining/Reducing
6000 Series Pilot

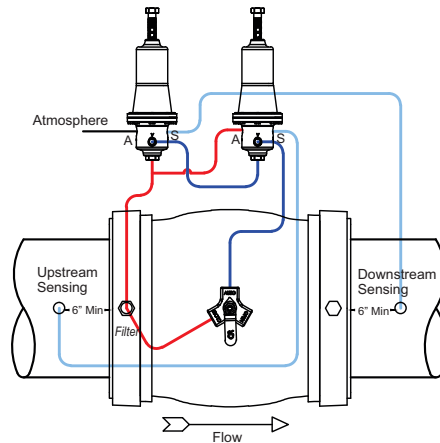

Pressure Sustaining/Electric On/Off
6000 Series Pilot

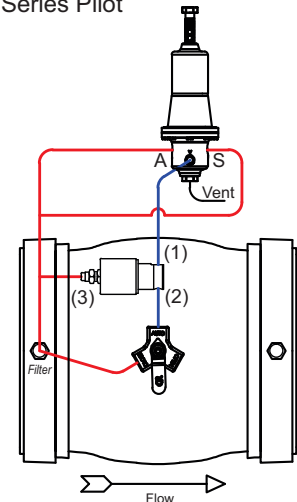

Pressure Sustaining
6000 Series Pilot and Check Valve

